

# INNOSILICON

## D9+ DCR USER MANUAL



## Table of Contents

<b>1. OVERVIEW</b>	<b>1</b>
<b>2. ASSEMBLE THE MINER</b>	<b>2</b>
2.1 Check the miner before power on	2
2.2 Connect the PSU	3
2.3 Connect the Ethernet Cable	3
<b>3. OPERATE THE MINER</b>	<b>4</b>
3.1 Enter the miner console	4
3.2 Set up the pool	4
3.3 Check the hashrate of the miner	5
3.4 Network configuration	5
3.5 Other pages	6
3.5.1 Overview	6
3.5.2 Upgrade	6
3.5.3 Modify the password	7
3.5.4 Reboot	7
3.5.5 Factory reset	7

## 1. OVERVIEW



Part Number	D9+
Algorithm	Blake256
Hash Rate	2.8Th/s (+-8%)
Power	1230W +/-8%
Size (LxWxH)	(L)310mm*(W)130mm*(H)155mm
Net Weight	3.6KG (without PSU)
Operating Temperature	0-40 °C
Required rated PSU	1400W or above, 7 * PCI-E 6Pin
Network Connection	Ethernet

## 2. ASSEMBLE THE MINER

### 2.1 CHECK THE MINER BEFORE POWER ON

- Check the warranty sticker is well or not, especially the hashboards PSU port side. If the warranty sticker is damaged when you received the miner, please contact our After-sales.
- Before you power on the miner, shake the miner softly, if you can hear the sound of metal banging on metal, please contact our After-sales.
- Check if the fan work well, if you find the fans broken please contact our After-sales.
- Check the cable connection, if it is different from below picture, please connect the cables as below.



## 2.2 CONNECT THE PSU

Every hash board needs to be inserted with 2 PSU cables, controller only needs 1 PSU cable according to the following image



## 2.3 CONNECT THE ETHERNET CABLE

Insert one end of the Ethernet cable into the router and the other end into the slot shown in the following image, you should plug in the miner one by one, only when you have accomplished IP Setting of the previous one you can plug in another miner .



**IP SET button:** Press it more than 5 seconds to recover the IP to 192.168.1.25

Press it more than 20 seconds to switch the Dynamic (Static) IP to Static (Dynamic) 4.


**RESET button:** Your miner will restart if you press it. It wont recover your settings to the default.




## 3. OPERATE THE MINER

### 3.1 ENTER THE MINER CONSOLE

DHCP(the Normal led on the control board should be blinking) is the default IP mode of the miner, find the IP via the router or the IP scanner. Enter the IP of the miner on the browser and press the Enter button. The chrome is the suggested browser.

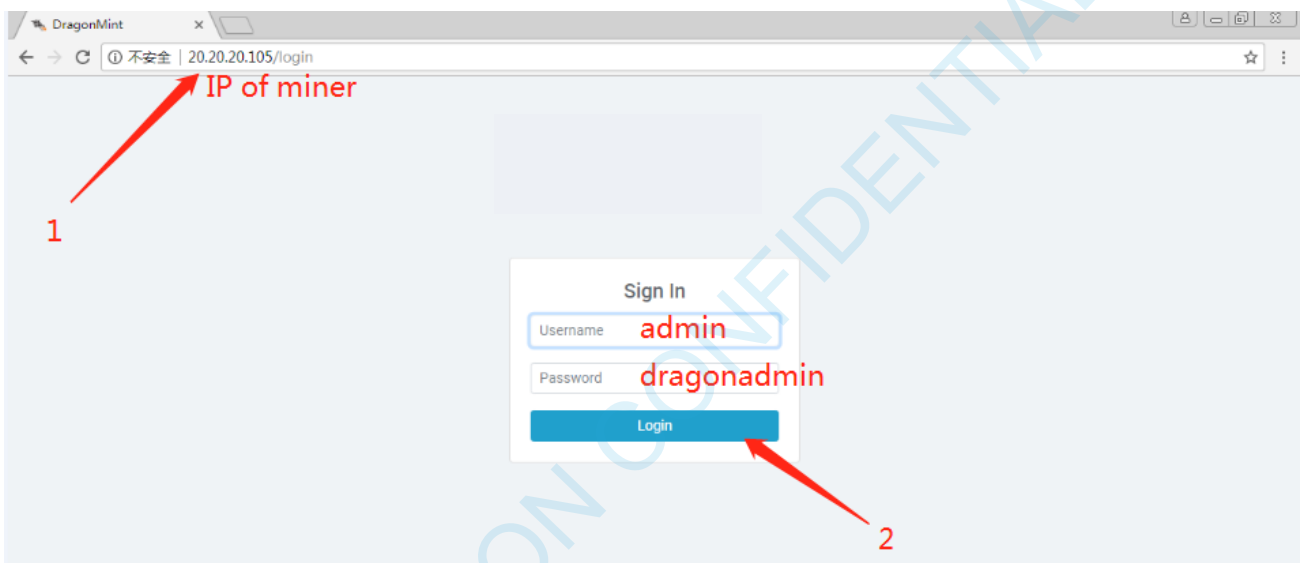

### 3.2 SET UP THE POOL

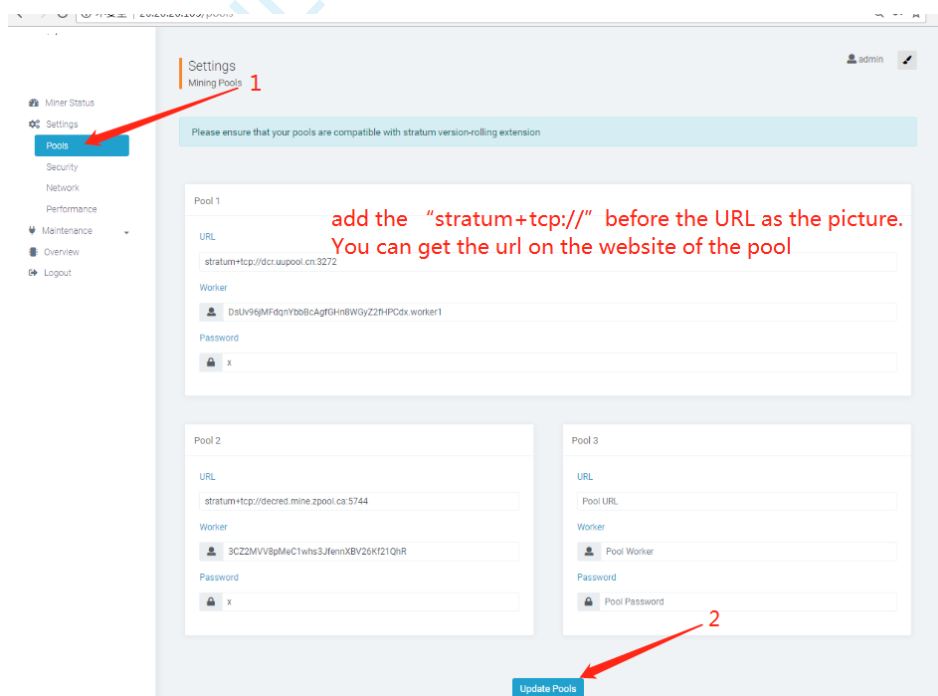

## 3.3 CHECK THE HASHRATE OF THE MINER

After set up the pool, the miner will mine for you.

**Miner Status**  
Live Data (auto-refresh)

Please note the miner is autotuning, hashrate may vary until completion!

50m up time | 99.9% (1539/1) accepted rate

2.35 TH/s hash rate | 100% fan speed

**hashrate graph**

**the using pool**

Pool	User	Status	Get Works	Accepted / Rejected
1 stratum-tcp://dcr.uupool.cn:3272	DslUv96jMFdqYbbBcAgfGHnsWgyZ2fHPDcx.worker1	Alive	27	1539/1
2 stratum-tcp://decred.mine.zpool.ca:5744	3C2ZMVV8pMeC1whs3JfemXBV26Kf21QhR	Dead	0	0/0

**hashrate of per hashboard**

#	Hash Rate	Status	Accepted	Rejected	HW	Temperature
1	784.79 GH/s	Alive	474	0	3	63 °C
2	784.79 GH/s	Alive	519	1	1	63 °C
3	785.34 GH/s	Alive	546	0	5	61 °C

## 3.4 NETWORK CONFIGURATION

**Settings**  
Network

**Network Settings**

**if you want to use the static IP, please click here unselect the DHCP**

DHCP  Please check this box if you want the miner to receive an IP address automatically from your DHCP server.

IP: 20.20.20.105

Netmask: 255.255.255.0

Gateway: 20.20.20.1

DNS 1: 208.67.222.222

DNS 2: Name Server 2


**Update**

1


2

## 3.5 OTHER PAGES

### 3.5.1 OVERVIEW

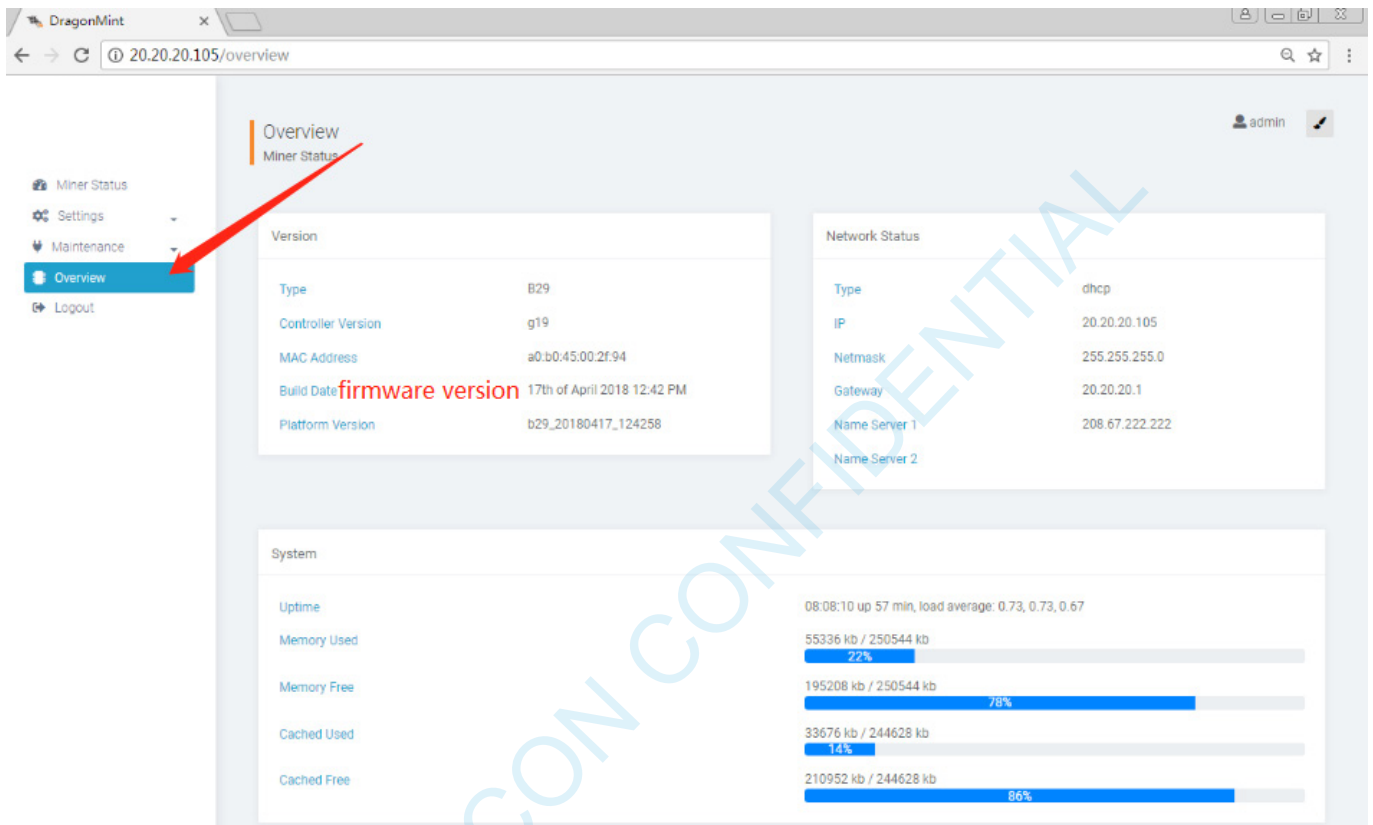


### 3.5.2 UPGRADE

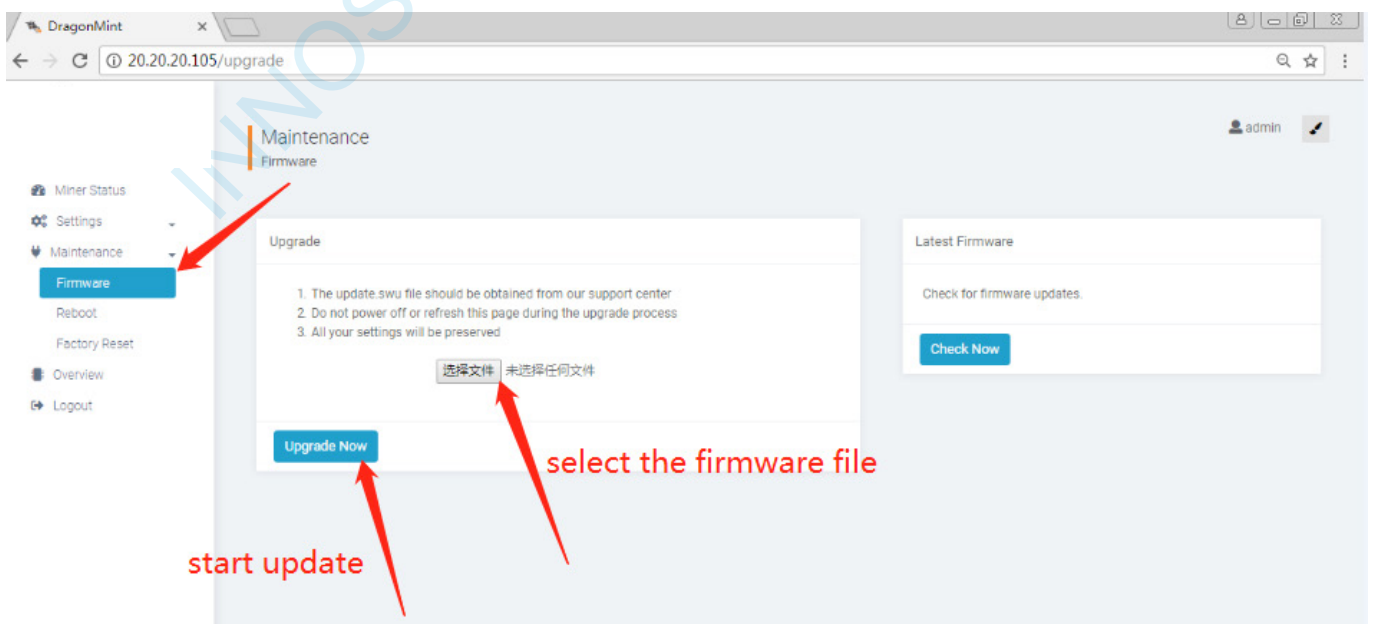




## 3.5.3 MODIFY THE PASSWORD

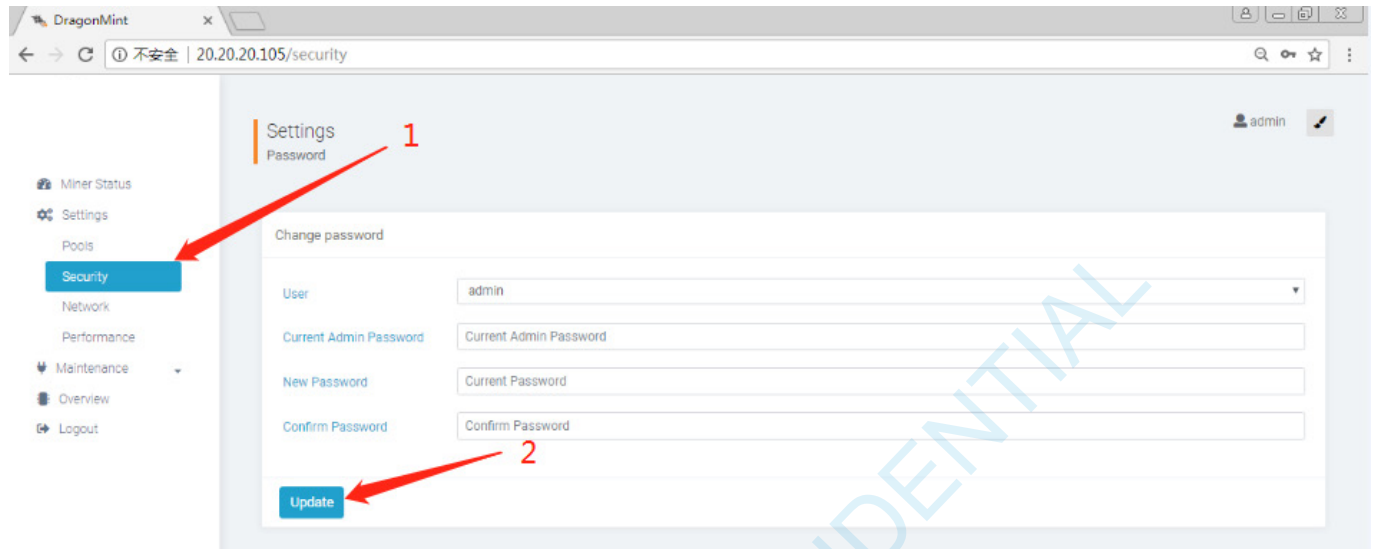

## 3.5.4 REBOOT

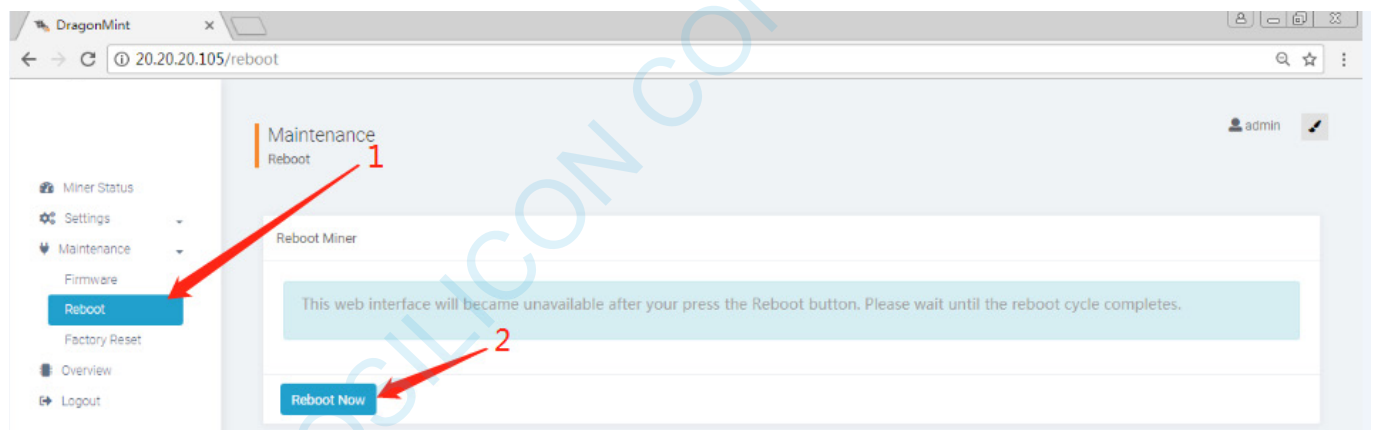

## 3.5.5 FACTORY RESET

